

# Resetting the RIH3000R after Experiencing any Difficulties

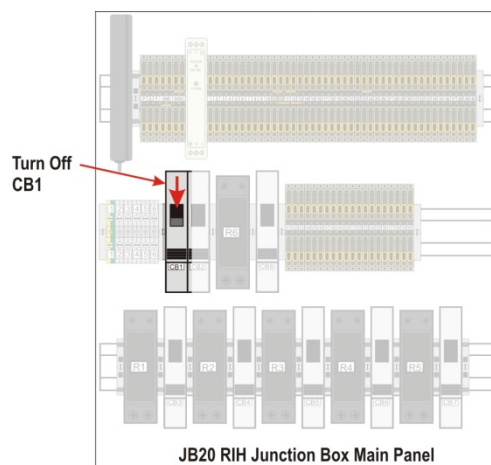


**Figure 1: Fleetwatch RIH 3000R**

- 1) Clear the service lane of vehicle and personnel. This is important to ensure the vehicle detector/sensors are calibrated properly when power is turned off and on again.
- 2) Unlock the JB20 junction box and turn off power to the RIH unit. See figure 3.
- 3) Wait 20 seconds

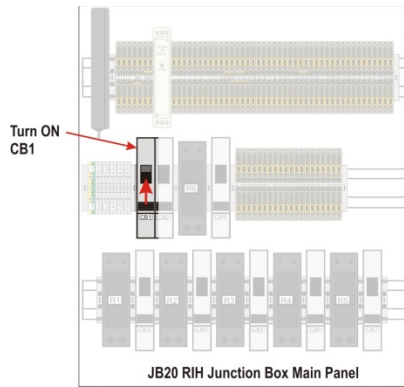


**Figure 2-Fleetwatch JB20 Junction Box**



**Figure 3- Turn off Power to the RIH by flipping the CB1 switch off for at least 20 seconds.**

- 4) Turn on power to the RIH using CB1.



**Figure 4: Turn power on to the RIH by turning the CB1 switch on again.**

- 5) Using the Auto/Manual key, perform a reset by turning the Start key switch to the right, and then let the key switch go back to the normal position (spring-loaded).



**Figure 5: Performing a key reset with the key-switch tells the server to initialize the RIH.**

- 6) Press Reset on the keypad.



**Figure 6: Press RESET on keypad to clear any irregularities and start with new prompt.**

Please call S&A Systems, Inc. at (972) 722-1009 x32 for system validation or if you have any questions.