

Replacing the RIH3000R with a Spare



Figure 1: Fleetwatch RIH 3000R

- 1) Unlock the Junction box and turn off power to the RIH unit (JB20). See figure 3.



Figure 2-Fleetwatch JB20 Junction Box

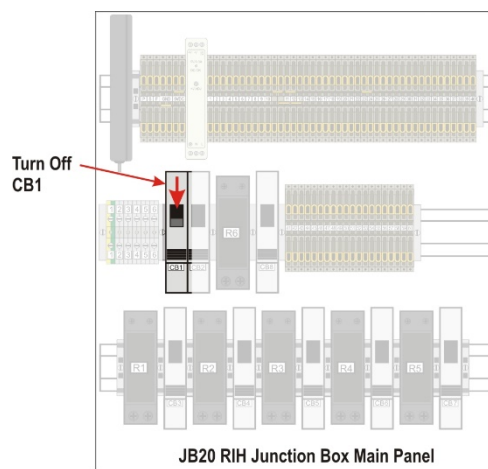


Figure 3- Turn off Power to the RIH by turn the CB1 switch off

- 2) Unscrew the three military connectors from the back of the RIH.
- 3) Remove the four nuts holding the RIH to the stand or wall bracket.
- 4) Mount the spare RIH to the bracket or stand.

- 5) Reconnect the three military connectors to the new RIH. **Hand-tighten the connectors. Do not overtighten the connectors or damage could occur**

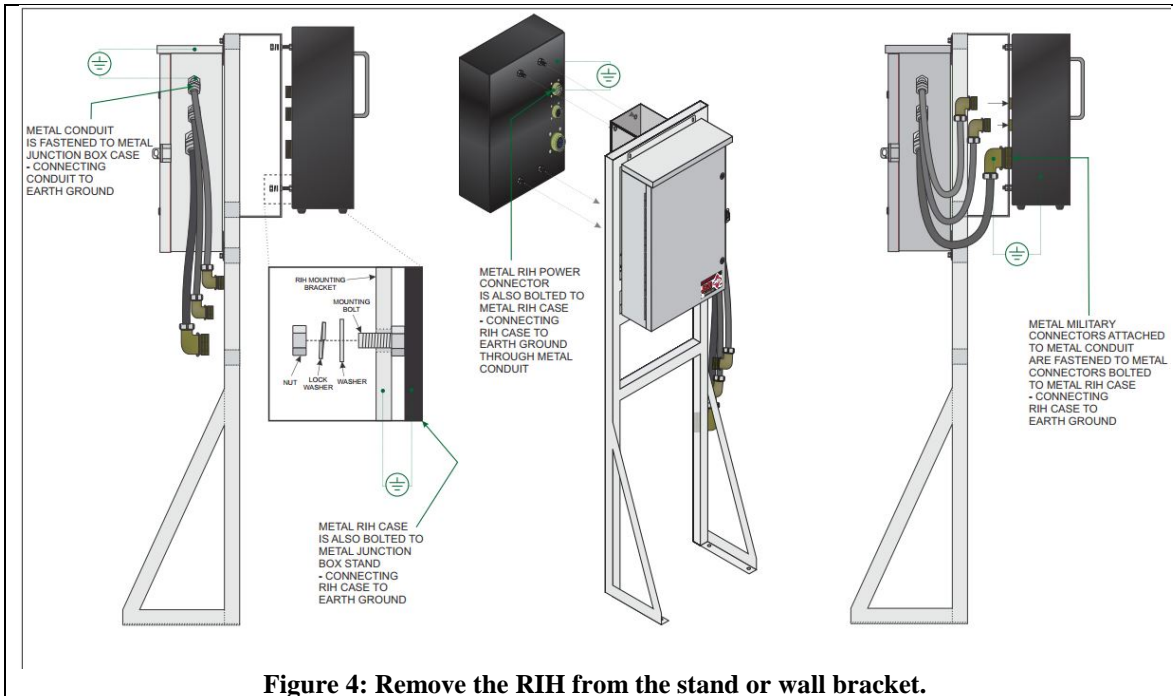


Figure 4: Remove the RIH from the stand or wall bracket.

- 6) Turn on power to the RIH using CB1.

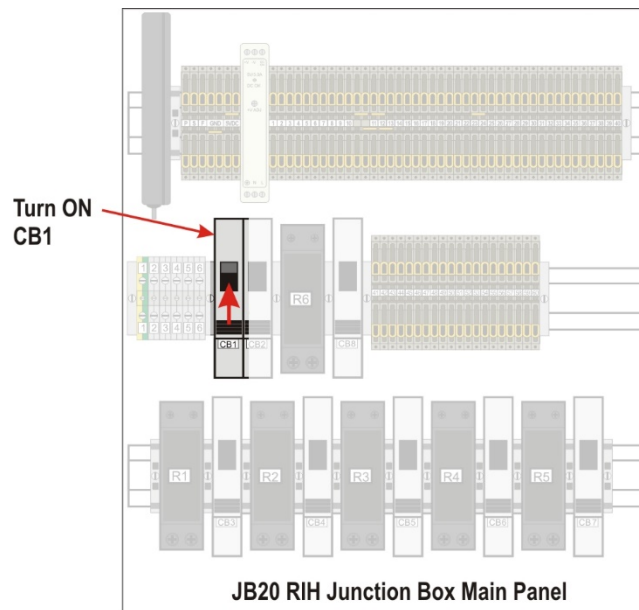


Figure 5: Turn power on to the RIH

- 7) Using the Auto/Manual key, perform a reset by turning the Start key switch to the right, and then let the key switch go back to the normal position (spring-loaded).



Figure 6: To initialize the RIH in order to see the correct prompts and tell the RIH to talk to the server, turn the key-switch or call S&A Systems to remotely initialize the RIH.

- 8) Press Reset on the keypad.



Figure 7: Press RESET button after initializing the RIH to complete the process and display the correct prompts.

Please call S&A Systems, Inc. at (972) 722-1009 x32 for system validation or if you have any questions.